



SERVICE MANUAL

Model: DS-425/425P

Edition	Month	Year
1 st	September	1998
2 nd	December	1998
3 rd	April	2001
4 th	January	2002
5 th	November	2002

Shanghai Teraoka Electronic Co., Ltd. --- Technical Support Dept.

A/18F of New HuaLian Mansion, East Tower, 755# HuaiHai Zhong Road, Shanghai China 200020

Tel: +86-21-6473-9918 Fax: +86-21-5490-1934 E-mail: steservice@dig-scale.com

CONTENTS

1. General Specification

1.1. Overall Dimension	-----	1
1.2. Display Panel	-----	1
1.3. Main Feature	-----	2
1.4. Operation Condition	-----	2
1.5. Main Function	-----	2
1.6. Layout And Function	-----	3

2. Initial Set-Up

2.1. Stopper Screws	-----	5
2.2. Adjustment	-----	6
2.3. Location of the SPAN SW	-----	6
2.4. Span Switch Check	-----	7
2.5. Span Adjustment	-----	7
2.6. Specification Setting	-----	8
2.7. Internal Count and A/D Count Display	-----	9
2.8. Specification List (*V1.01)	-----	9
2.9. System Display Information	-----	11
2.10. Specification List (*V1.05)	-----	12
2.11. Specification List (* V2.00)	-----	14

3. Main Operation

3.1. System On	-----	16
3.2. One Touch Tare	-----	16
3.3. Digital Tare Operation	-----	16
3.4. Gross / Net Display Toggle	-----	17
3.5. Weight Unit Conversion	-----	17
3.6. Counting Operation	-----	17
3.7. Set-Point Setting	-----	18
3.8. Set-Point Alarm Function	-----	19
3.9. Print Operation	-----	20

4. RS-232C Protocol

4.1. Communication Specs	-----	21
4.2. Communication Text Command	-----	21
4.3. Data Format	-----	21
4.4. Communication Method	-----	22

5. Hardware Specification

5.1. Main Components	-----	24
5.2. Block Diagram	-----	24
5.3. Electronic Connection Diagram	-----	24
5.4. Circuitry Diagram	-----	25